


Check printer scaling using 10mm grid
All dimensions in millimetres

BSL
240
250
260
270
280
290
300
310
320
330
340
350
360

Align BSL size with boot centre mark on ski

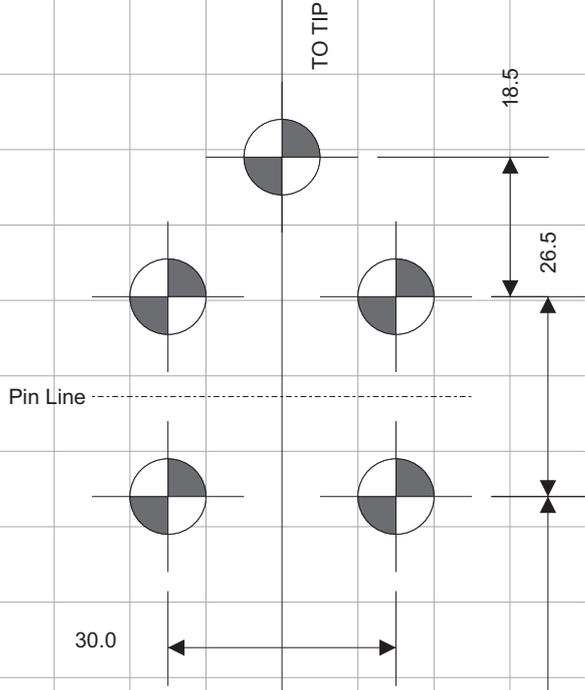

TO TIP

18.5

26.5

30.0

124.0

140.0

53.0

32.0

36.0

TO TAIL



BSL

360
350
340
330
320
310
300
290
280
270
260
250
240

Align BSL size with boot centre mark on ski

Dynafit Binding Hole Pattern version 1 by altis